

My_NB APP (iOS)

INITIAL SETUP

Minimum System Requirement (Mobile Device): iOS 11

Installing the APP


Use the "my_NB" keyword to search for the My_NB app from **App Store**. Then follow the on-screen instructions to download and install the App to your mobile device.



Connecting the Device to the App

- 1 On the camera, press and hold the  button for 3 seconds to switch to the Wi-Fi mode. Once the Wi-Fi mode is activated, the SSID and password will appear on the screen.

Wi-Fi mode is activated


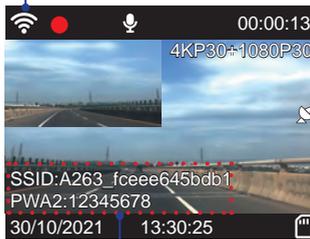


SSID and Password Info

- 2 On your mobile device, launch **Settings**. Then enable the Wi-Fi function.
- 3 Select A263_XXXXXXXXXX and enter the password. Then tap **Join** to connect to the camera.

NOTE:

The default password is "12345678". To change the SSID or password, refer to "Wi-Fi Setting" on page 31.

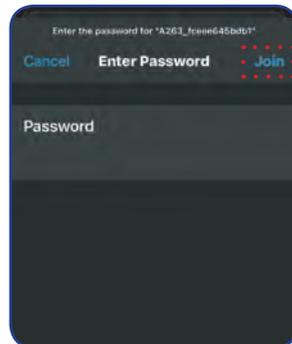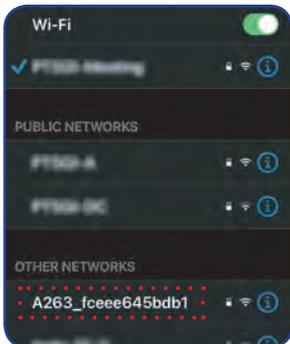


Once the connection is established, the Wi-Fi icon (📶) turns green. The SSID and password will disappear from the screen.



USING THE APP

Overview

- 1 On your mobile device, tap the  icon to launch the My_NB app.
- 2 Tap **CONNECT YOUR CAMERA** to enter the main screen. The live view is displayed on the screen.

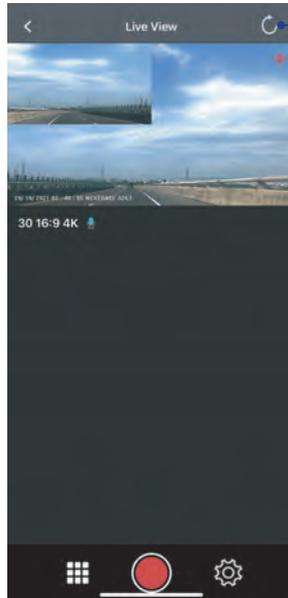

Tap to refresh the live stream.

To stop the video recording, tap . To continue, tap .

Viewing the Recorded Files

NOTE:

Before accessing the files, make sure to stop the video recording first. Otherwise, the reminder message will appear on the screen. Tap **OK** to dismiss the message.





To view the recorded videos:


- 1 On the bottom panel, tap .



- 2 Select the video category (**Video** or **Emergency** tab) that you want to view.

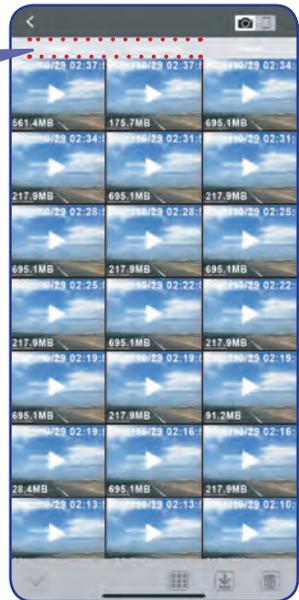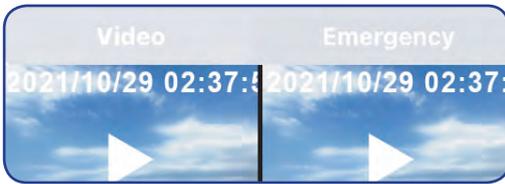


- 3 Select the desired video. Then tap  to start the play the video.
 - To pause during playback, tap . Then tap  to resume.
 - To exit the playback screen, tap **Done**.

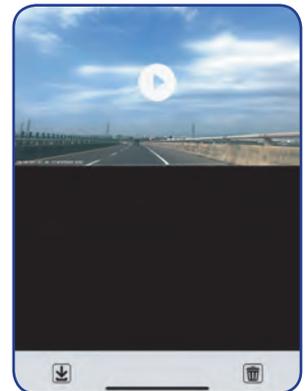


To view the recorded photos:

- 1 On the bottom panel, tap . Then select the **Photo** tab.

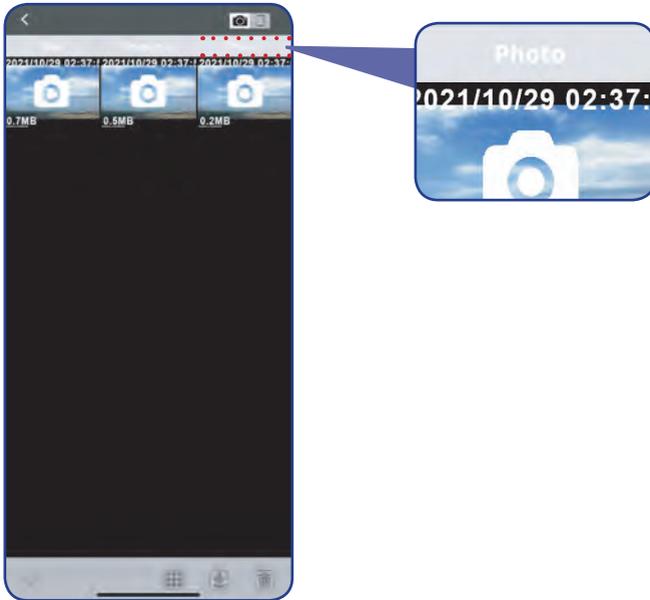

- 2 Select the desired photo that you want to view.

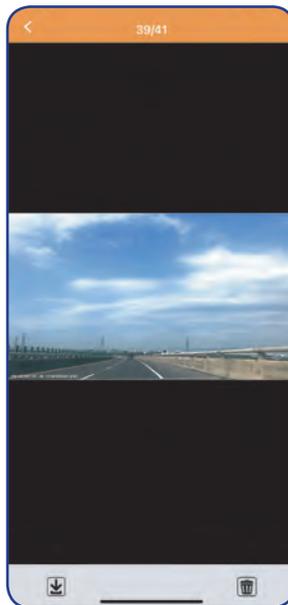

Managing the Recorded Files

NOTE:


Before accessing the files, make sure to stop the video recording first. Otherwise, the reminder message will appear on the screen. Tap **OK** to dismiss the message.

To save the file(s) to your mobile device:

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap and select the file(s) that you want to download. Then tap  to download the selected file(s).




- 3 Select one of the following options:

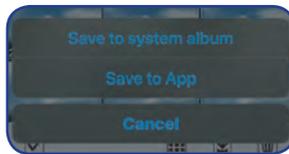

- **Save to system album:** Save the file(s) to the system album (**Photos**) on your mobile device.

NOTE:

A warning reminder message will appear on the screen. Tap **Ok** to continue.

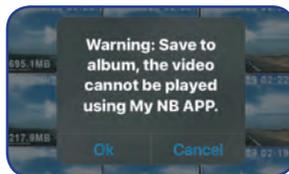

- **Save to App:** Save the file(s) to your mobile device (app). To view the downloaded files, refer to page 28.
- **Cancel:** Cancel the operation.

- 4 After the saving process is complete, a “Success” message will appear on the screen. Tap **Ok** to return to the selection page.

**NOTE:**

You can also directly save the file while viewing the photo/video. Simply tap  to save the file.

To save all files to your mobile device:

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap . Then tap  to select all files.

**NOTE:**

To deselect the files, tap  again.

- 3 Tap . Then select **Save to system album** or **Save to App**.
- 4 After the saving process is complete, a “Success” message will appear on the screen. Tap **Ok** to return to the selection page.

To browse the downloaded files:


- 1 On the bottom panel, tap . Then tap  (on the top-right panel).
- 2 Select the video category (**Video** or **Emergency** tab) or **Photo** tab.



- 3 Select the file that you want to view.


NOTE:

To delete the file, tap . When a confirmation message appears, tap **Ok** to continue.

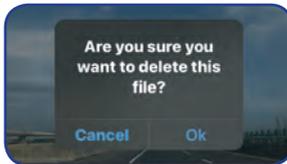


To delete the file(s):

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap and select the file(s) that you want to delete. Then tap  to delete the selected file(s).
- 3 A confirmation message will appear on the screen. Tap **Ok** to confirm the deletion.

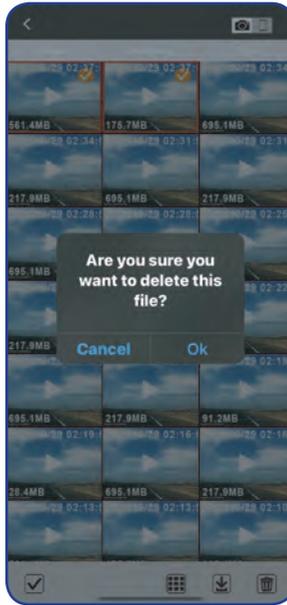

To delete all files:

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap . Then tap  to select all files.
- 3 Tap  to delete all files.
- 4 A confirmation message will appear on the screen. Tap **Ok** to confirm the deletion.

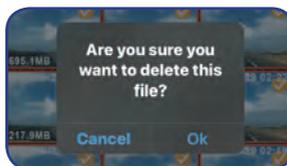

Configuring the Device Settings

NOTE:

Before configuring the device settings, make sure to stop the video recording first. Otherwise, the reminder message will appear on the screen. Tap **OK** to dismiss the message.

To configure the video or system related settings:

On the bottom panel, tap . Then select the desired option and adjust the necessary settings.



Menu Option	Description
Video Resolution	Select the recording resolution.
Loop Recording	Select the recording time for the individual video files.
Recording Audio	Turn on/off the microphone for video recording.
Motion Detection	Enable/disable the motion detection function.
G-Sensor	Select the sensitivity level of the G-Sensor.
Date Stamp	Turn on/off the date stamp shown on the recorded files.
GPS Stamp	Turn on/off the GPS co-ordinates and speed stamp shown on the recorded files
Speed Unit	Select whether to record and display speed in KM/H or MPH.
Screen Save	Turn on the Screen Saver function to turn off the screen after a chosen period of inactivity.
Frequency	Set the frequency setting according to the power supply specification used in your country or geographical region.
Date/Time	Sync the camera to your mobile device to automatically update the date and time settings. You can also manually adjust the date and time settings.

Menu Option	Description
Wi-Fi Setting	<p>Change the Wi-Fi network name (SSID) and the password.</p> 
Available Memory Space	View the remaining storage space on the microSD card.
Format SD Card	Format the inserted microSD card.
Reset Camera Setting	Reset the camera to the factory default settings.
App Version	Display the app version number.
Firmware Version	Display the version number of the currently installed firmware.