



AC-1

Remote Controller for Aura DSP

OWNER'S


MANUAL

WARNING!

PLEASE READ CAREFULLY BEFORE USING

Introduction & Troubleshooting

1.Statement

Thank you for purchasing  Controller . We strongly recommend using the services of a professional installation studio to install the Controller. The correct configuration of the system and the qualifications of specialists will allow you to maximize the potential of your controller, avoid unpleasant situations, as well as eliminate connection errors and possible malfunctions

This manual mainly introduces the product functions, uses and operation methods of Remote controller for DSP. The manual is only used as the user's operation guide, not as the basis for maintenance service. Due to the continuous improvement of the products upgrade, we reserve the right to change the design and specifications without prior notice. The product illustration and appearance effect in the manual are for reference only. Please refer to the actual product.

2.Tips

As part of our quality system control, each product is carefully packed before leaving the factory. After unpacking, please check the product carefully for physical damage. To facilitate future packing and ensure product safety during transporting. Please keep all packing materials and article. In case of physical damage to the machine, please inform us immediately so as to provide formal document for the damage.

3. Accessories

According to the model you purchased, the following accessories should be placed in the packing box. If there is any shortage, please inform the seller or manufacturer as soon as possible:

- Controller – 1 No
- Instruction Manual – 1 No

Specifications

| | |
|---------------------------|------------------------------------|
| LCD Size: | 2 Inch |
| Source Selection: | Hi Level/BT/USB/Optical/U Disk/Aux |
| Master Volume : | Yes |
| Previous/Next Selection : | Yes |
| Model Selection: | Yes |
| Cable Length:Metre | 5.0 |
| Size (LxWxH)mm | 112x49.5x13 |
| Weight (Kgs) | 0.23 |

Wiring Diagram & Operations



LCD display: Display sound source, main voices and display title

Model:

Switch scenes. When long pressing the button, the scene number flashes and enters scene switching mode. Operate the up and down keys to switch scenes

Source:

Click to switch source.

PREV and Next :

Click to switch up and down song (U disk/Bluetooth sound source)

Short press knob:

Short pressing silent.

Long press for five seconds:

Long press to enter the switch mode, you can choose the main volume mode or a heavy bass mode.

Knob:

Turn the knob to adjust the sound volume.



WARRANTY

This product has one year warranty . To ensure your warranty policy keep your original receipt proofing the date of purchase. Any damage to the product as a result of misuse, abuse, accident, incorrect wiring, improper installation, alteration of date code or barcode labels, revolution, natural disaster, or any sneaky stuff because someone messed up, repair or alteration outside of our factory or authorized service centers and anything else you have done that you should not have done is not covered. This warranty is limited to defective parts and specifically excludes any incidental or consequential damages connected there with.

Imported and Marketed by
Enigma Technotronix Pvt Ltd
A-5, Naraina Ring Road
New Delhi-110028 India
Email : info@enigmattech.co.in



All rights reserved by Enigma Technotronix Pvt Ltd

<https://www.enigmattech.co.in/>

<https://twitter.com/enigmadigital72>

<https://www.facebook.com/enigmadigitaltechno/> <https://www.instagram.com/enigmattechnotronix/>

<https://www.linkedin.com/company/enigma-technotronix/>